
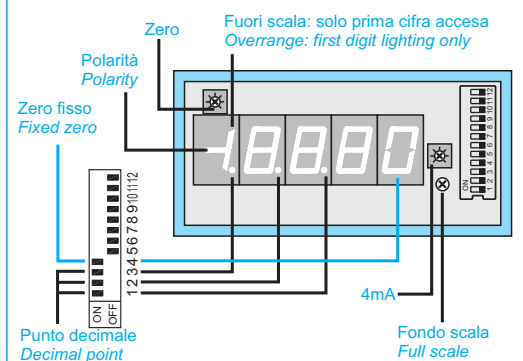


MANUALE OPERATIVO - OPERATOR'S MANUAL

lpm0138/1

Vista frontale - Front view

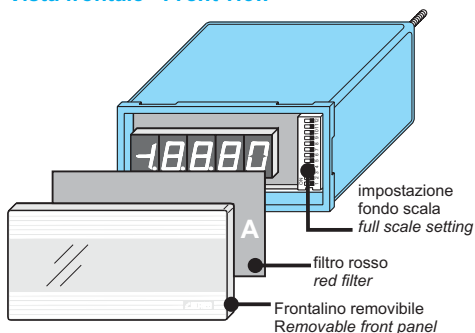


Normalmente preimpostato per fondo scala 1999 - Factory full scale preset at 1999

IMPOSTAZIONE FONDO SCALA - FULL SCALE SETTING

0,150	1,50	15,0	150	1500
0,200	2,00	20,0	200	2000
0,250	2,50	25,0	250	2500
0,300	3,00	30,0	300	3000
0,400	4,00	40,0	400	4000
0,500	5,00	50,0	500	5000
0,600	6,00	60,0	600	6000
0,750	7,50	75,0	750	7500
0,800	8,00	80,0	800	8000
1,000	10,00	100,0	1000	10000
1,200	12,00	120,0	1200	12000
1,500	15,00	150,0	1500	15000
1,999	19,99	199,9	1999	19990

Dimensioni ingombro - Overall dimensions

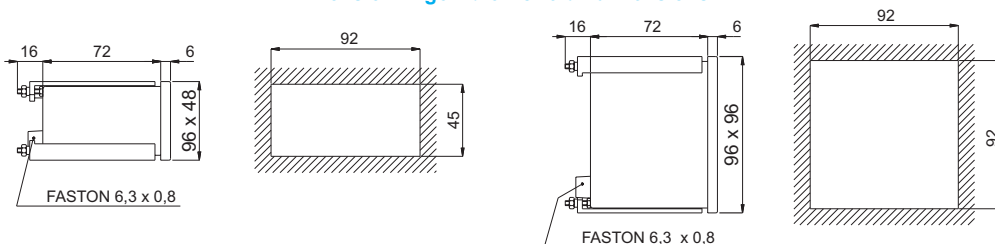

FRER srl - Viale Europa, 12
20093 - Cologno Monzese - (Milano) ITALY
Tel. ++39.02.27.30.28.28 - Fax ++39.02.25.39.15.18
www.frer.it - e-mail: frersale@frer.it - frerexport@frer.it